

IV

(Notices)

NOTICES FROM EUROPEAN UNION INSTITUTIONS, BODIES, OFFICES AND AGENCIES

EUROPEAN COMMISSION

Commission Communication in the framework of the implementation of Commission Regulation (EU) No 206/2012 of 6 March 2012 implementing Directive 2009/125/EC of the European Parliament and of the Council with regard to ecodesign requirements for air conditioners and comfort fans

and of

Commission delegated Regulation (EU) No 626/2011 of 4 May 2011 supplementing Directive 2010/30/EU of the European Parliament and of the Council with regard to energy labelling of air conditioners

(Text with EEA relevance)

(2012/C 172/01)

(Publication of titles and references of transitional methods of measurement ⁽¹⁾ for the implementation of Commission Regulation (EU) No 206/2012 and, in particular, Annex II thereof, and for the implementation of delegated Regulation (EU) No 626/2011 and, in particular, Annex VII thereof)

Measured parameter	Organisation	Reference	Title
Energy efficiency Ratio (EER), Coefficient of Performance (COP)	CEN	EN 14511:2007	Air conditioners, liquid chilling packages and heat pumps with electrically driven compressors for space heating and cooling
Energy efficiency Ratio (EER)	CEN	EN 15218:2006	Air conditioners and liquid chilling packages with evaporatively cooled condenser and with electrically driven compressors for space cooling
Test methods for SEER and SCOP	CEN	PrEN 14825:2011, chapter 8 and 9	Air conditioners, liquid chilling packages and heat pumps, with electrical compressors, for space heating and cooling – Testing and rating at part load conditions and calculation of seasonal performance
Standby power consumption	CEN	EN 62301:2005	Household Electrical Appliances: Measurement of standby power
Sound power level	CEN	EN 12102:2008	Air conditioners, liquid chilling packages, heat pumps and dehumidifiers with electrically driven compressors for space heating and cooling - Measurement of airborne noise - Determination of the sound power
Energy efficiency	IEC	IEC 60879: 1986 (corr. 1992)	Performance and construction of electric circulating fans and regulators
Sound power level	EN	EN 60704-2-7:1997	Household and similar electrical appliances - Test code for the determination of airborne acoustical noise - Part 2: Particular requirements for fans

⁽¹⁾ It is intended that these transitional methods will ultimately be replaced by harmonised standard(s). When available, reference(s) to the harmonised standard(s) will be published in the *Official Journal of the European Union* in accordance with Articles 9 and 10 of Directive 2009/125/EC.

Calculation methods for air conditioners ($\leq 12\text{kW}$) and comfort fans

CONTENTS

	<i>page</i>
Section 1 - Air Conditioners	3
1. Definitions	3
2. Tables	8
3. Air conditioners, except single ducts and double ducts	15
3.1. SEER	15
3.1.1. For fixed capacity units	16
3.1.2. For staged capacity units	17
3.1.3. For variable capacity units	18
3.2. SCOP	18
3.2.1. For fixed capacity units	20
3.2.2. For staged capacity units	21
3.2.3. For variable capacity units	22
3.3. Determination of P_{TO} , P_{SB} , P_{OFF} and P_{CK}	22
3.3.1. Determination of P_{TO}	22
3.3.2. Determination of P_{SB}	22
3.3.3. Determination of P_{OFF}	22
3.3.4. Determination of P_{CK}	22
4. Single ducts and double ducts	23
4.1. EER	23
4.2. COP	23
4.3. Seasonal electricity consumption	23
Section 2 - Comfort fans	24
1. Definitions	24
2. Tables	25
3. Service value and annual electricity consumption	25
3.1. Service value	25
3.2. Seasonal electricity consumption	25
Section 3 - General Aspects	26
Test report	26

SECTION 1 - AIR CONDITIONERS

1. Definitions

Definitions relating to air conditioners:

- (1) 'Air conditioner' means a device capable of cooling or heating, or both, indoor air, using a vapour compression cycle driven by one or more electric compressors, including air conditioners that provide additional functionalities such as dehumidification, air-purification, ventilation or supplemental air-heating by means of electric resistance heating, as well as appliances that may use water (either condensate water that is formed on the evaporator side or externally added water) for evaporation on the condenser provided that the device is also able to function without the use of additional water, using air only;
- (2) 'Double duct air conditioner' means an 'air conditioner' in which, during cooling or heating, the condenser (or evaporator) intake air is introduced from the outdoor environment to the unit by a duct and rejected to the outdoor environment by a second duct, and which is placed wholly inside the space to be conditioned, near a wall;
- (3) 'Single duct air conditioner' means an 'air conditioner' in which, during cooling or heating, the condenser (or evaporator) intake air is introduced from the space containing the unit and discharged outside this space;
- (4) 'Reversible air conditioner' means an air conditioner capable of both cooling and heating;
- (5) 'Standard rating conditions' means the combination of indoor (T_{in}) and outdoor temperatures (T_j) that describe the operating conditions while establishing the rated capacity, sound power level, rated air flow rate, rated energy efficiency ratio (EER_{rated}) and/or rated coefficient of performance (COP_{rated}), as described in table 4;
- (6) 'Rated capacity' (P_{rated}) means the cooling or heating capacity of the vapour compression cycle of the unit at standard rating conditions;
- (7) 'Indoor temperature' (T_{in}) means the dry bulb indoor air temperature [$^{\circ}\text{C}$] (with the relative humidity indicated by the corresponding wet bulb temperature);
- (8) 'Outdoor temperature' (T_j) means the dry bulb outdoor air temperature [$^{\circ}\text{C}$] (with the relative humidity indicated by the corresponding wet bulb temperature);
- (9) 'Rated energy efficiency ratio' (EER_{rated}) means the declared capacity for cooling [kW] divided by the Rated power input for cooling [kW] of a unit when providing cooling at standard rating conditions;
- (10) 'Rated coefficient of performance' (COP_{rated}) means the declared capacity for heating [kW] divided by the Rated power input for heating [kW] of a unit when providing heating at standard rating conditions;
- (11) 'Global warming potential' (GWP) means the measure of how much 1 kg of the refrigerant applied in the vapour compression cycle is estimated to contribute to global warming, expressed in kg CO₂ equivalents over a 100 year time horizon.

GWP values considered will be those set out in Annex 1 part 2 of Regulation (EC) No 842/2006 of the European Parliament and of the Council ⁽²⁾.

For fluorinated refrigerants, the GWP values shall be those published in the third assessment report (TAR) adopted by the Intergovernmental Panel on Climate Change (2001 IPCC GWP values for a 100 year period) ⁽³⁾.

⁽²⁾ OJ L 161, 14.6.2006, p. 1.

⁽³⁾ IPCC Third Assessment Climate Change 2001. A Report of the Intergovernmental Panel on Climate Change: <http://www.ipcc.ch/pub/reports.htm>

For non-fluorinated gases, the GWP values are those published in the First IPCC assessment over a 100 year period ⁽⁴⁾.

GWP values for mixtures of refrigerants shall be based on the formula stated in Annex I of the Regulation 842/2006.

For refrigerants not included in the above references, the IPCC UNEP 2010 report on Refrigeration, Air Conditioning and Heat Pumps, dated February 2011, or newer, shall be used as a reference.

- (12) 'Off mode' is a condition in which the air conditioner is connected to the mains power source and is not providing any function. Also considered as *off mode* are conditions providing only an indication of off mode condition, as well as conditions providing only functionalities intended to ensure electromagnetic compatibility pursuant to Directive 2004/108/EC of the European Parliament and of the Council;
- (13) 'Standby mode' means a condition where the equipment (air conditioner) is connected to the mains power source, depends on energy input from the mains power source to work as intended and provides only the following functions, which may persist for an indefinite time: reactivation function, or reactivation function and only an indication of enabled reactivation function, and/or information or status display;
- (14) 'Reactivation function' means a function facilitating the activation of other modes, including active mode, by remote switch including remote control, internal sensor, timer to a condition providing additional functions, including the main function;
- (15) 'Information or status display' is a continuous function providing information or indicating the status of the equipment on a display, including clocks;
- (16) 'Sound power level' means the A-weighted sound power level [dB(A)] indoors and/or outdoors measured at *standard rating conditions* for cooling (or heating, if the product has no cooling function);
- (17) 'Reference design conditions' means the combination of requirements for the *reference design temperature*, the *maximum bivalent temperature* and the *maximum operation limit temperature*, as described in Table 5;
- (18) 'Reference design temperature' means the *outdoor temperature* [°C] for either cooling (*T_{designc}*) or heating (*T_{designh}*) as described in Table 3, at which the *part load ratio* shall be equal to 1, and which varies according to the designated cooling or heating *season*. See also the explanation of the concept provided in Annex A;
- (19) 'Part load ratio' (*pl(T_j)*) means the *outdoor temperature* minus 16°C, divided by the *reference design temperature* minus 16°C, for either cooling or heating;
- (20) 'Season' means one of four sets of ambient conditions (available for four seasons: *one cooling season, three heating seasons: average / colder / warmer*) describing per *bin* the combination of *outdoor temperatures* and the number of hours these temperatures occur per season the unit is declared fit for purpose;
- (21) 'Bin' (with index *j*) means a combination of an *outdoor temperature* (*T_j*) and *bin hours* (*h_j*), as described in table 7;

⁽⁴⁾ Climate Change, The IPCC Scientific Assessment, J.T Houghton, G.J.Jenkins, J.J. Ephraums (ed.) Cambridge University Press, Cambridge (UK) 1990.

- (22) 'Bin hours' means the hours per season (h_j) the outdoor temperature occurs for each bin, as described in table 7;
- (23) 'Seasonal energy efficiency ratio' (SEER) is the overall energy efficiency ratio of the unit, representative for the whole cooling season, calculated as the Reference annual cooling demand divided by the Annual electricity consumption for cooling;
- (24) 'Reference annual cooling demand' (Q_C) means the reference cooling demand [kWh/a] to be used as basis for calculation of SEER and calculated as the product of the design load for cooling ($P_{designc}$) and the equivalent active mode hours for cooling (H_{CE});
- (25) 'Equivalent active mode hours for cooling' (H_{CE}) means the assumed annual number of hours [hrs/a] the unit must provide the design load for cooling ($P_{designc}$) in order to satisfy the Reference annual cooling demand, as described in table 8;
- (26) 'Annual electricity consumption for cooling' (Q_{CE}) means the electricity consumption [kWh/a] required to meet the Reference annual cooling demand and is calculated as the Reference annual cooling demand divided by the active mode seasonal energy efficiency ratio (SEERon) and the electricity consumption of the unit for thermostat off-, standby-, off- and crankcase heater-mode during the cooling season;
- (27) 'Active mode seasonal energy efficiency ratio' (SEERon) means the average energy efficiency ratio of the unit in active mode for the cooling function, constructed from part load and bin-specific energy efficiency ratio's ($EER_{bin}(T_j)$) and weighted by the bin hours the bin condition occurs;
- (28) 'Part load' means the cooling load ($P_c(T_j)$) or the heating load ($P_h(T_j)$) [kW] at a specific outdoor temperature T_j , calculated as the design load multiplied by the part load ratio;
- (29) 'Bin-specific energy efficiency ratio' ($EER_{bin}(T_j)$) means the energy efficiency ratio specific for every bin j with outdoor temperature T_j in a season, derived from the part load, declared capacity and declared energy efficiency ratio ($EER_d(T_j)$) for specified bins (j) and calculated for other bins through inter/extrapolation, when necessary corrected by the degradation coefficient;
- (30) 'Seasonal coefficient of performance' (SCOP) is the overall coefficient of performance of the unit, representative for the whole designated heating season (the value of SCOP pertains to a designated heating season), calculated as the Reference annual heating demand divided by the Annual electricity consumption for heating;
- (31) 'Reference annual heating demand' (Q_H) means the reference heating demand [kWh/a], pertaining to a designated heating season, to be used as basis for calculation of SCOP and calculated as the product of the design load for heating ($P_{designh}$) and the seasonal equivalent active mode hours for heating (H_{HE});
- (32) 'Equivalent active mode hours for heating' (H_{HE}) means the assumed annual number of hours [hrs/a] the unit must provide the design load for heating ($P_{designh}$) in order to satisfy the Reference annual heating demand, as described in table 8;
- (33) 'Annual electricity consumption for heating' (Q_{HE}) means the electricity consumption [kWh/a] required to meet the indicated Reference annual heating demand and which pertains to a designated heating season; and is calculated as the Reference annual heating demand divided by the active mode seasonal coefficient of performance (SCOPon) and the electricity consumption of the unit for thermostat off-, standby-, off- and crankcase heater-mode during the heating season;
- (34) 'Active mode seasonal coefficient of performance' (SCOPon) means the average coefficient of performance of the unit in active mode for the designated heating season, constructed from the part load, electric back up heating capacity (where required) and bin-specific coefficients of performance ($COP_{bin}(T_j)$) and weighted by the bin hours the bin condition occurs;

- (35) 'Electric back-up heater capacity' ($elbu(T_j)$) is the heating capacity [kW] of a real or assumed electric back-up heater with COP of 1 that supplements the declared capacity for heating ($P_{dh}(T_j)$) in order to meet the part load for heating ($Ph(T_j)$) in case $P_{dh}(T_j)$ is less than $Ph(T_j)$, for the outdoor temperature (T_j);
- (36) 'Bin-specific coefficient of performance' ($COP_{bin}(T_j)$) means the coefficient of performance specific for every bin j with outdoor temperature T_j in a season, derived from the part load, declared capacity and declared coefficient of performance ($COP_d(T_j)$) for specified bins (j) and calculated for other bins through inter/extrapolation, when necessary corrected by the degradation coefficient;
- (37) 'Declared capacity' [kW] is the capacity of the vapour compression cycle of the unit for cooling ($P_{dc}(T_j)$) or heating ($P_{dh}(T_j)$), pertaining to an outdoor temperature T_j and indoor temperature (T_{in}), as declared by the manufacturer;
- (38) 'Capacity control' means the ability of the unit to change its capacity by changing the volumetric flow rate. Units are to be indicated as 'fixed' if the unit can not change its volumetric flow rate, 'staged' if the volumetric flow rate is changed or varied in series of not more than two steps, or 'variable' if the volumetric flow rate is changed or varied in series of three or more steps;
- (39) 'Function' means the indication of whether the unit is capable of indoor air cooling, indoor air heating or both;
- (40) 'Design load' means the declared cooling load ($P_{designc}$) and/or declared heating load ($P_{designh}$) [kW] at the reference design temperature, whereby
- for cooling mode, $P_{designc}$ is equal to the declared capacity for cooling at T_j equal to $T_{designc}$;
 - for heating mode, $P_{designh}$ is equal to the part load at T_j equal to $T_{designh}$;
- (41) 'Declared energy efficiency ratio' ($EER_d(T_j)$) means the energy efficiency ratio at a limited number of specified bins (j) with outdoor temperature (T_j), as declared by the manufacturer;
- (42) 'Declared coefficient of performance' ($COP_d(T_j)$) means the coefficient of performance at a limited number of specified bins (j) with outdoor temperature (T_j), as declared by the manufacturer;
- (43) 'Bivalent temperature' (T_{biv}) means the outdoor temperature (T_j) [°C] declared by the manufacturer for heating at which the declared capacity equals the part load and below which the declared capacity must be supplemented with electric back up heater capacity in order to meet the part load for heating;
- (44) 'Operation limit temperature' (T_{ol}) means the outdoor temperature [°C] declared by the manufacturer for heating, below which air conditioner will not be able to deliver any heating capacity. Below this temperature, the declared capacity is equal to zero;
- (45) 'Cycling interval capacity' [kW] is the (time-weighted) average of the declared capacity over the cycling test interval for cooling (P_{cyc}) or heating (P_{ych});
- (46) 'Cycling interval efficiency for cooling' (EER_{cyc}) is the average energy efficiency ratio over the cycling test interval (compressor switching on and off), calculated as the integrated cooling capacity over the interval [kWh] divided by the integrated electric power input over that same interval [kWh];
- (47) 'Cycling interval efficiency for heating' (COP_{cyc}) is the average coefficient of performance over the cycling test interval (compressor switching on and off), calculated as the integrated heating capacity over the interval [kWh] divided by the integrated electric power input over that same interval [kWh];

- (48) 'Degradation coefficient' is the measure of efficiency loss due to cycling (compressor switching on/off in *active mode*) established for cooling (Cdc), heating (Cdh) or chosen as default value 0.25;
- (49) 'Active mode' means the mode corresponding to the hours with a cooling or heating load of the building and whereby the cooling or heating function of the unit is activated. This condition may involve on/off-cycling of the unit in order to reach or maintain a required indoor air temperature;
- (50) 'Thermostat-off mode' means a mode corresponding to the hours with no cooling or heating load whereby the cooling or heating function of the unit is switched on but the unit is not operational as there is no cooling or heating load. This condition is therefore related to outdoor temperatures and not to indoor loads. Cycling on / off in active mode is not considered as thermostat off;
- (51) 'Crankcase heater operation mode' means a condition where the unit has activated a heating device to avoid the refrigerant migrating to the compressor in order to limit the refrigerant concentration in oil at compressor start;
- (52) 'Thermostat-off mode power consumption' (P_{TO}) means the power consumption of the unit [kW] while in *thermostat-off mode*;
- (53) 'Standby mode power consumption' (P_{SB}) means the power consumption of the unit [kW] while in *standby mode*;
- (54) 'Off-mode power consumption' (P_{OFF}) means the power consumption of the unit [kW] while in *off-mode*;
- (55) 'Crankcase heater operation mode power consumption' (P_{CK}) means the power consumption of the unit [kW] while in *crankcase heater operation mode*;
- (56) 'Thermostat-off mode operating hours' (H_{TO}) means the annual number of hours [hrs/a] the unit is considered to be in *thermostat-off mode*, the value of which depends on the designated season and function;
- (57) 'Standby mode operating hours' (H_{SB}) means the annual number of hours [hrs/a] the unit is considered to be in *standby mode*, the value of which depends on the designated season and function;
- (58) 'Off-mode operating hours' (H_{OFF}) means the annual number of hours [hrs/a] the unit is considered to be in *off-mode*, the value of which depends on the designated season and function;
- (59) 'Crankcase heater mode operating hours' (H_{CK}) means the annual number of hours [hrs/a] the unit is considered to be in *crankcase heater operation mode*, the value of which depends on the designated season and function;
- (60) 'Nominal air flow rate' means the air flow rate [m^3/h] measured at the air outlet of indoor and/or outdoor units (if applicable) of air conditioners at *standard rating conditions* for cooling (or heating, if the product has no cooling function);
- (61) 'Rated power input for cooling' (P_{EER}) means the electric power input [kW] of a unit when providing cooling at *standard rating conditions*;
- (62) 'Rated power input for heating' (P_{COP}) means the electric power input [kW] of a unit when providing heating at *standard rating conditions*;
- (63) 'Electricity consumption of single / double ducts' (Q_{SD} respectively Q_{DD}) means the electricity consumption of single or double duct air conditioners for the cooling and/or heating mode (whichever applies) [single duct in kWh/60 min, double duct in kWh/60 min];

- (64) 'Capacity ratio' means the ratio of the total declared cooling or heating capacity of all operating indoor units to the declared cooling or heating capacity of the outdoor unit(s) at standard rating conditions;
- (65) 'Tolerance' means the deviation allowed for the declared capacity at outdoor temperature T_j to vary from the part load identified for the same outdoor temperature T_j as applied in the calculation of staged and variable capacity units.

2. Tables

Table 1

Information sheet for air conditioners, except double ducts and single ducts ⁽⁵⁾

Information to identify the model(s) to which the information relates to

Function (indicate to which function the information applies)				If information applies to heating: Indicate the heating season the information relates to. Information should relate to one heating season at a time. Include at least the heating season 'Average'.			
cooling		Y/N		Average (mandatory)		Y/N	
heating		Y/N		Warmer (if designated)		Y/N	
				Colder (if designated)		Y/N	
Item	symbol	value	unit	Item	symbol	value	unit
Design load				Seasonal efficiency			
cooling	P _{designc}	x,x	kW	cooling	SEER	x,xx	—
heating/Average	P _{designh}	x,x	kW	heating/Average	SCOP (A)	x,xx	—
heating/Warmer	P _{designh}	x,x	kW	heating/Warmer	SCOP (W)	x,xx	—
heating/Colder	P _{designh}	x,x	kW	heating/Colder	SCOP (C)	x,xx	—
Declared capacity (*) for cooling, at indoor temperature 27(19) °C and outdoor temperature T_j				Declared Energy efficiency ratio (*) for cooling, at indoor temperature 27(19) °C and outdoor temperature T_j			
$T_j = 35\text{ °C}$	P _{dc}	x,x	kW	$T_j = 35\text{ °C}$	EER _d	x,x	—
$T_j = 30\text{ °C}$	P _{dc}	x,x	kW	$T_j = 30\text{ °C}$	EER _d	x,x	—
$T_j = 25\text{ °C}$	P _{dc}	x,x	kW	$T_j = 25\text{ °C}$	EER _d	x,x	—
$T_j = 20\text{ °C}$	P _{dc}	x,x	kW	$T_j = 20\text{ °C}$	EER _d	x,x	—
Declared capacity (*) for heating / Average season, at indoor temperature 20 °C and outdoor temperature T_j				Declared Coefficient of performance (*) for heating / Average season, at indoor temperature 20 °C and outdoor temperature T_j			
$T_j = -7\text{ °C}$	P _{dh}	x,x	kW	$T_j = -7\text{ °C}$	COP _d	x,x	—
$T_j = 2\text{ °C}$	P _{dh}	x,x	kW	$T_j = 2\text{ °C}$	COP _d	x,x	—

⁽⁵⁾ For multi split appliances, data shall be provided at a Capacity ratio of 1

Function (indicate to which function the information applies)				If information applies to heating: Indicate the heating season the information relates to. Information should relate to one heating season at a time. Include at least the heating season 'Average'.			
cooling	Y/N			Average (mandatory)	Y/N		
heating	Y/N			Warmer (if designated)	Y/N		
				Colder (if designated)	Y/N		
Item	symbol	value	unit	Item	symbol	value	unit
Tj = 7 °C	Pdh	x,x	kW	Tj = 7 °C	COPd	x,x	—
Tj = 12 °C	Pdh	x,x	kW	Tj = 12 °C	COPd	x,x	—
Tj = bivalent temperature	Pdh	x,x	kW	Tj = bivalent temperature	COPd	x,x	—
Tj = operating limit	Pdh	x,x	kW	Tj = operating limit	COPd	x,x	—
Declared capacity (*) for heating / Warmer season, at indoor temperature 20 °C and outdoor temperature Tj				Declared Coefficient of performance (*) / Warmer season, at indoor temperature 20 °C and outdoor temperature Tj			
Tj = 2 °C	Pdh	x,x	kW	Tj = 2 °C	COPd	x,x	—
Tj = 7 °C	Pdh	x,x	kW	Tj = 7 °C	COPd	x,x	—
Tj = 12 °C	Pdh	x,x	kW	Tj = 12 °C	COPd	x,x	—
Tj = bivalent temperature	Pdh	x,x	kW	Tj = bivalent temperature	COPd	x,x	—
Tj = operating limit	Pdh	x,x	kW	Tj = operating limit	COPd	x,x	—
Declared capacity (*) for heating / Colder season, at indoor temperature 20 °C and outdoor temperature Tj				Declared Coefficient of performance (*) / Colder season, at indoor temperature 20 °C and outdoor temperature Tj			
Tj = - 7 °C	Pdh	x,x	kW	Tj = - 7 °C	COPd	x,x	—
Tj = 2 °C	Pdh	x,x	kW	Tj = 2 °C	COPd	x,x	—
Tj = 7 °C	Pdh	x,x	kW	Tj = 7 °C	COPd	x,x	—
Tj = 12 °C	Pdh	x,x	kW	Tj = 12 °C	COPd	x,x	—
Tj = bivalent temperature	Pdh	x,x	kW	Tj = bivalent temperature	COPd	x,x	—
Tj = operating limit	Pdh	x,x	kW	Tj = operating limit	COPd	x,x	—
Tj = - 15 °C	Pdh	x,x	kW	Tj = - 15 °C	COPd	x,x	—

Function (indicate to which function the information applies)				If information applies to heating: Indicate the heating season the information relates to. Information should relate to one heating season at a time. Include at least the heating season 'Average'.			
cooling	Y/N			Average (mandatory)	Y/N		
heating	Y/N			Warmer (if designated)	Y/N		
				Colder (if designated)	Y/N		
Item	symbol	value	unit	Item	symbol	value	unit
Bivalent temperature				Operating limit temperature			
heating/Average	T _{biv}	x	°C	heating/Average	T _{ol}	x	°C
heating/Warmer	T _{biv}	x	°C	heating/Warmer	T _{ol}	x	°C
heating/Colder	T _{biv}	x	°C	heating/Colder	T _{ol}	x	°C
Power consumption of cycling				Efficiency of cycling			
cooling	P _{cycc}	x,x	kW	cooling	EER _{cycc}	x,x	—
heating	P _{cyhc}	x,x	kW	heating	COP _{cycc}	x,x	—
Degradation coefficient cooling (**)	C _{dc}	x,x	—	Degradation coefficient heating (**)	C _{dh}	x,x	—
Electric power input in power modes other than 'active mode'				Seasonal electricity consumption			
off mode	P _{OFF}	x,x	W	cooling	Q _{CE}	x	kWh/a
standby mode	P _{SB}	x,x	W	heating/Average	Q _{HE/A}	x	kWh/a
thermostat-off mode	P _{TO}	x,x	W	heating/Warmer	Q _{HE/W}	x	kWh/a
crankcase heater mode	P _{CK}	x,x	W	heating/Colder	Q _{HE/C}	x	kWh/a
Capacity control (indicate one of three options)				Other items			
Fixed	Y/N			Sound power level (indoor/outdoor)	L _{WA}	x,x/x,x	dB(A)
staged	Y/N			Global warming potential	GWP	x	kgCO ₂ eq.

Function (indicate to which function the information applies)				If information applies to heating: Indicate the heating season the information relates to. Information should relate to one heating season at a time. Include at least the heating season 'Average'.			
cooling	Y/N			Average (mandatory)	Y/N		
heating	Y/N			Warmer (if designated)	Y/N		
				Colder (if designated)	Y/N		
Item	symbol	value	unit	Item	symbol	value	unit
variable	Y/N			Rated air flow (indoor/outdoor)	—	x/x	m ³ /h
Contact details for obtaining more information	At least, name and address of the manufacturer or its authorised representative.						

(*) For staged capacity units, two values divided by a slash (/) will be declared in each box in the section "Declared capacity of the unit" and "declared EER/COP" of the unit. The number of decimal digits in the box indicates the precision of reporting.

(**) If default Cd=0,25 is chosen then (results from) cycling tests are not required. Otherwise either the heating or cooling cycling test value is required.

Table 2

Information sheet for single duct and double duct air conditioners

Information to identify the model(s) to which the information relates to [fill in as necessary]

Description	Symbol	Value	Unit
Rated output power for cooling	P_{rated} for cooling	[x,x]	kW
Rated output power for heating	P_{rated} for heating	[x,x]	kW
Rated power input for cooling	P_{EER}	[x,x]	kW
Rated power input for heating	P_{COP}	[x,x]	kW
Rated Energy efficiency ratio	EER_{rated}	[x,x]	—
Rated Coefficient of performance	COP_{rated}	[x,x]	—
Thermostat-off mode power consumption	P_{TO}	[x,x]	W
Standby mode power consumption	P_{SB}	[x,x]	W
Seasonal electricity consumption			
for double ducts (DD): hourly electricity consumption			DD: kWh/60 min.
for single ducts (SD): hourly electricity consumption	Q	[x,x]	SD: kWh/60 min.
Sound power level (indoor only)	L_{WA}	[x]	dB(A)
Global warming potential of refrigerant	GWP	[x]	kgCO ₂ eq.
Contact details for obtaining more information	At minimum, name and address of the manufacturer or its authorised representative.		

Table 3

Parameter list for calculation of seasonal efficiency SEER/SCOP

Description	Symbol	Value	Unit	Note
Bin-parameters				
Bin-index	j	0		two significant decimal digits
Outdoor temperature in bin j	T _j	0	°C	
Cooling load in bin j	P _c (T _j)	0,00	kW	
Heating load in bin j	P _h (T _j)	0,00	kW	
Cooling capacity in bin j	P _{dc} (T _j)	0,00	kW	
Heating capacity in bin j	P _{dh} (T _j)	0,00	kW	
Heating capacity of back-up heater in bin j	elbu(T _j)	0,00	kW	
CONSTANTS				
Reference design outdoor temperature	<i>cooling: T_{designc} heating: T_{designh}</i>	0	°C	Values see table 5
Equivalent hours per season in active mode	<i>cooling: H_{CE} heating: H_{HE}</i>	0	h	Values see table 8
Hours per season in thermostat-off mode	H _{TO}	0	h	Values see table 8
Hours per season in crankcase heater operation mode	H _{CK}	0	h	Values see table 8
Hours per season in stand-by mode	H _{SB}	0	h	Values see table 8
Hours per season in off-mode	H _{OFF}	0	h	Values see table 8
Indoor air temperature for cooling mode	T _{in}	0	°C	Values see table 6

Table 4

Standard rating conditions (temperatures in °C dry bulb / wet bulb)

Appliance	Function	Indoor air temperature T _{in}	Outdoor air temperature T _j
air conditioners, excluding single duct (including double ducts)	cooling	27 / 19	35 / 24
	heating	20 / max. 15	7 / 6
single duct	cooling	35 / 24	35 / 24 (*)
	heating	20 / 12	20 / 12 (*)

(*) In case of single ducts the condenser (evaporator) when cooling (heating) is not supplied with outdoor air, but indoor air.

Table 5

Reference design conditions (temperatures in °C dry bulb / wet bulb)

Function / season	Indoor air temperature T_{in}	Outdoor air temperature $T_{designc}$ / $T_{designh}$	Bivalent temperature T_{biv}	Operating limit temperature T_{ol}
cooling	27 °C / wb: 19	$T_{designc} = 35$ / 24	n.a.	n.a.
heating / Average	20 °C	$T_{designh} = -10$ / -11	max. 2	max. -7
heating / Warmer	/ wb: max. 15	$T_{designh} = 2$ / 1	max. 7	max. 2
heating / Colder		$T_{designh} = -22$ / -23	Max. -7	max. -15

Table 6

Part load test conditions

Cooling	indoor air temperature	outdoor air temperature		
A	27 °C / wb: 19	35 °C		
B		30 °C		
C		25 °C		
D		20 °C		
Heating	Indoor air temperature (T_{in})	Outdoor air temperature (T_j), for designated season in °C		
		Average	Warmer	Colder
A	20 °C / wb: max. 15	-7	n.a.	-7
B		+2	+2	+2
C		+7	+7	+7
D		+12	+12	+12
G		n.a.	n.a.	-15

Table 7

Cooling and heating season bins (j = bin index, T_j = outdoor temp., h_j = hours per annum per bin)

COOLING SEASON			HEATING SEASON				
j #	T_j °C	h_j hrs	j #	T_j °C	h_j hrs		
					"Warmer"	"Average"	"Colder"
1	17	205	1 to 8	- 30 to - 23	0	0	0
2	18	227	9	- 22	0	0	1
3	19	225	10	- 21	0	0	6
4	20	225	11	- 20	0	0	13
5	21	216	12	- 19	0	0	17
6	22	215	13	- 18	0	0	19
7	23	218	14	- 17	0	0	26
8	24	197	15	- 16	0	0	39
9	25	178	16	- 15	0	0	41
10	26	158	17	- 14	0	0	35
11	27	137	18	- 13	0	0	52
12	28	109	19	- 12	0	0	37
13	29	88	20	- 11	0	0	41
14	30	63	21	- 10	0	1	43
15	31	39	22	- 9	0	25	54
16	32	31	23	- 8	0	23	90
17	33	24	24	- 7	0	24	125
18	34	17	25	- 6	0	27	169
19	35	13	26	- 5	0	68	195
20	36	9	27	- 4	0	91	278
21	37	4	28	- 3	0	89	306
22	38	3	29	- 2	0	165	454
23	39	1	30	- 1	0	173	385
24	40	0	31	0	0	240	490
			32	1	0	280	533
			33	2	3	320	380
			34	3	22	357	228
			35	4	63	356	261
			36	5	63	303	279
			37	6	175	330	229
			38	7	162	326	269
			39	8	259	348	233
			40	9	360	335	230
			41	10	428	315	243
			42	11	430	215	191
			43	12	503	169	146
			44	13	444	151	150
			45	14	384	105	97
			46	15	294	74	61
total hrs.:		2 602	total hrs.:		3 590	4 910	6 446

Table 8

Operational hours per type of air conditioner per functional mode (hrs/a)

Type of air conditioner / function	Unit	Heating season	On mode	Thermostat -off mode	Standby mode	Off mode	Crankcase heater mode	
			cooling: H _{CE} heating: H _{HE}	H _{TO}	H _{SB}	H _{OFF}	H _{CK}	
Air conditioners, except double ducts and single duct								
Cooling mode, if appliance offers cooling only	h/a		350	221	2 142	5 088	7 760	
Cooling and heating modes, if appliance offers both modes	Cooling mode	h/a	350	221	2 142	0	2 672	
	Heating mode	h/a	Average	1 400	179	0	0	179
			Warmer	1 400	755	0	0	755
			Colder	2 100	131	0	0	131
Heating mode, if appliance offers heating only	h/a		Average	1 400	179	0	3 672	3 851
			Warmer	1 400	755	0	4 345	4 476
			Colder	2 100	131	0	2 189	2 944
Double duct								
Cooling mode, if appliance offers cooling only	h/60 min		1	n/a	n/a	n/a	n/a	
Cooling and heating modes, if appliance offers both modes	Cooling mode	h/60 min	1	n/a	n/a	n/a	n/a	
	Heating mode	h/60 min	1	n/a	n/a	n/a	n/a	
Heating mode, if appliance offers heating only	h/60 min		1	n/a	n/a	n/a	n/a	
Single duct								
Cooling mode	h/60 min		1	n/a	n/a	n/a	n/a	
Heating mode	h/60 min		1	n/a	n/a	n/a	n/a	

3. Air conditioners, except single ducts and double ducts

This section describes for cooling and heating the method for calculating the seasonal energy performance and annual electricity consumption of air conditioners, except single and double duct air conditioners.

3.1. SEER

The SEER is the *seasonal energy efficiency ratio* for cooling and is calculated as:

$$SEER = Q_C / Q_{CE}$$

Equation 1

where:

Q_C is the reference annual cooling demand [kWh/a], calculated as:

$$Q_C = P_{designc} * H_{CE} \quad \text{Equation 2}$$

where:

$P_{designc}$ is the design load for cooling [kW], equal to the declared capacity for cooling $P_{dc}(T_j)$ at $T_j = T_{designc}$ outdoor temperature;

H_{CE} is the equivalent active mode hours for cooling [hrs], as provided in Table 8

Q_{CE} is the annual electricity consumption for cooling [kWh/a], calculated as:

$$Q_{CE} = (Q_C / SEER_{on}) + H_{TO} * P_{TO} + H_{CK} * P_{CK} + H_{OFF} * P_{OFF} + H_{SB} * P_{SB} \quad \text{Equation 3}$$

$$SEER_{on} = \frac{\sum_{j=1}^n h_j * P_c(T_j)}{\sum_{j=1}^n h_j * \frac{P_c(T_j)}{EER_{bin}(T_j)}} \quad \text{Equation 4}$$

where:

T_j is the bin temperature assigned to bin with index j , from Table 7;

j is the bin index;

n is the amount of bins;

h_j is the number of hours assigned to bin with index j , from Table 7;

$P_c(T_j)$ is the part load for cooling at bin temperature T_j , calculated as:

$$P_c(T_j) = P_{designc} * pl(T_j) \quad \text{Equation 5}$$

where:

$P_{designc}$ is as defined above;

$pl(T_j)$ is the part load ratio, calculated as (and complying with: $pl(T_j) = 1.00$ at $T_j = T_{designc}$):

$$pl(T_j) = (T_j - 16) / (T_{designc} - 16) \quad \text{Equation 6}$$

$T_{designc}$ is the cooling season reference design temperature in °C, from table 5;

$EER_{bin}(T_j)$ is the bin-specific energy efficiency ratio that applies to bin j , calculated according to the equations below for either fixed, staged or variable capacity units, where:

3.1.1. For fixed capacity units

Calculate the anchor points $EER_{bin}(T_j)$ for the bin temperatures specified below to be used in inter- and extrapolations for $EER_{bin}(T_j)$ values at other bins.

Calculate for $T_j = 35$ °C:

$$EER_{bin}(T_j) = EER_d(T_j) \quad \text{Equation 7}$$

for $T_j = 30, 25, 20$ °C:

$$EER_{bin}(T_j) = EER_d(T_j) * [1 - C_{dc} * (1 - P_c(T_j) / P_{dc}(T_j))] \quad \text{Equation 8}$$

where:

$EER_d(T_j)$ is the declared energy efficiency ratio at the specified outdoor temperature T_j , as declared by the manufacturer in Table 1;

$P_c(T_j)$ is the *part load* at bin temperature $T_j = 30, 25, 20$ °C, as defined in equation 5.

$P_{dc}(T_j)$ is the declared cooling capacity at the specified outdoor temperature T_j , as declared by the manufacturer in Table 1;

C_{dc} is the *degradation factor for cooling*, which is either the default value 0,25, or equal to C_{dh} (for heating) or determined by tests and calculated for $T_j = 20$ °C as:

$$C_{dc} = (1 - EER_{cyc}/EER_d(T_j))/(1 - P_{cyc}/P_{dc}(T_j)) \quad \text{Equation 9}$$

where:

EER_{cyc} is the average energy efficiency ratio over the cycling test interval (active + off mode) calculated as the integrated cooling capacity over the interval [kWh] divided by the integrated electric power input over that same interval [kWh];

P_{cyc} is the (time-weighted) average cooling capacity output [kW] over the cycling test interval (active + off mode);

Values for $EER_{bin}(T_j)$ at other bins shall be calculated as follows:

- for bins j at outdoor temperatures between $T_j < 35$ °C and $T_j > 20$ °C and not corresponding to $T_j = 30$ °C or 25 °C, $EER_{bin}(T_j)$ shall be calculated using linear interpolation from the closest two anchor points.
- for bins j with an outdoor temperature T_j higher than 35 °C $EER_{bin}(T_j)$ values shall have the same value as $EER_{bin}(T_j=35$ °C).
- for bins j with an outdoor temperature T_j lower than 20 °C $EER_{bin}(T_j)$ values shall have the same value as $EER_{bin}(T_j=20$ °C).

3.1.2. For staged capacity units

Calculate the anchor points $EER_{bin}(T_j)$ for the bin temperatures specified below to be used in inter- and extrapolations for $EER_{bin}(T_j)$ values at other bins.

The manufacturer shall declare for each test condition the cooling capacity ($P_{dc}(T_j)$) and efficiency ($EER_d(T_j)$) of the equipment at both settings, to be indicated with "_{hi}" for the setting resulting in the highest capacity and "_{lo}" for the setting that results in the lower capacity. The anchor points $EER_{bin}(T_j)$ are calculated from $P_{dc_{hi}}$, $P_{dc_{lo}}$ and $EER_{d_{hi}}$, $EER_{d_{lo}}$ values for capacity and efficiency as follows:

For $T_j = 35$ °C:

$$EER_{bin}(T_j) = EER_d(T_j)_{hi} \quad \text{Equation 10}$$

for $T_j = 30, 25, 20$ °C:

if $P_{designc} * pl(T_j) * (1 - tolerance) \leq P_{dc}(T_j)_{lo} \leq P_{designc} * pl(T_j) * (1 + tolerance)$, then:

$$EER_{bin}(T_j) = EER_d(T_j)_{lo} \quad \text{Equation 11}$$

where:

$$tolerance = 10 \% \quad \text{Equation 12}$$

if $P_{designc} * pl(T_j) * (1 - tolerance) \leq P_{dc}(T_j)_{hi} \leq P_{designc} * pl(T_j) * (1 + tolerance)$, then:

$$EER_{bin}(T_j) = EER_d(T_j)_{hi} \quad \text{Equation 13}$$

where *tolerance* is as defined above.

if $P_c(T_j) > P_{dc}(T_j)_{lo}$ then:

$$EERbin(T_j) = \frac{P_c(T_j)}{\frac{P_{dc}(T_j)_{hi} * (P_c(T_j) - P_{dc}(T_j)_{lo})}{(P_{dc}(T_j)_{hi} - P_{dc}(T_j)_{lo}) * EERd(T_j)_{hi}} + \frac{P_{dc}(T_j)_{lo} * (P_{dc}(T_j)_{hi} - P_c(T_j))}{(P_{dc}(T_j)_{hi} - P_{dc}(T_j)_{lo}) * EERd(T_j)_{lo}}} \quad \text{Equation 14}$$

else:

$$EERbin(T_j) = EERd_{lo} \cdot [1 - Cdc \cdot (1 - P_c(T_j) / P_{dc}(T_j)_{lo})] \quad \text{Equation 15}$$

where:

$EERd(T_j)_{hi}$ and $EERd(T_j)_{lo}$ are declared efficiency values from Table 1;

$P_{dc}(T_j)_{hi}$ and $P_{dc}(T_j)_{lo}$ are declared capacity values from Table 1;

$P_c(T_j)$ is the part load for bin j with T_j is 20, 25, 30 and 35 °C;

Cdc is the *degradation factor for cooling*, which is either the default value 0,25 or equal to Cdh (for heating) or determined by tests and calculated for $T_j = 35$ °C as:

$$Cdc = (1 - EERcyc/EERd(T_j)_{lo}) / (1 - Pcycc/P_{dc}(T_j)_{lo}) \quad \text{Equation 16}$$

where:

$EERcyc$ and $Pcycc$ are as defined above;

$EERbin(T_j)$ values for bins j with outdoor temperatures T_j other than $T_j = 35, 30, 25$ and 20 °C are calculated according to the same rules applicable to **fixed capacity** units.

3.1.3. For variable capacity units

Calculate the anchor points $EERbin(T_j)$ for the bin temperatures specified below to be used in inter- and extrapolations for $EERbin(T_j)$ values at other bins.

If the capacity control of the unit allows it to operate with a capacity $P_{dc}(T_j)$ corresponding to the required part load $P_{designc} * (pl(T_j) \pm tolerance)$, the $EERbin(T_j)$ for bin j shall be assumed to be equal to $EERd(T_j)$.

Calculate for $T_j = 35, 30, 25$ and 20 °C:

if $P_{designc} * pl(T_j) * (1 - tolerance) < P_{dc}(T_j) < P_{designc} * pl(T_j) * (1 + tolerance)$ then:

$$EERbin(T_j) = EERd(T_j) \quad \text{Equation 17}$$

where:

$tolerance$, $P_{dc}(T_j)$, $P_{designc}$, $pl(T_j)$, $EERbin(T_j)$ and $EERd(T_j)$ are as defined above;

else: follow the calculation procedure for **staged capacity** units.

3.2. SCOP

The SCOP is the *seasonal coefficient of performance for heating*. The calculation of the SCOP shall be specific for a designated heating season (average/warmer/colder), since the bins that apply, the reference design temperature and the design load are specific for a heating season. The calculations below show the generic approach which will have to be repeated for each designated heating season.

The *Seasonal coefficient of performance for heating* is calculated as:

$$SCOP = Q_H / Q_{HE} \quad \text{Equation 18}$$

where:

Q_H is the reference annual heating demand [kWh/a], calculated as;

$$Q_H = P_{designh} * H_{HE} \quad \text{Equation 19}$$

where:

$P_{designh}$ is the design load for heating [kW] which is calculated from the declared bivalent point T_{biv} (T_{biv} provides $pl(T_j)$ for $T_j = T_{biv}$) and the declared capacity $P_{dh}(T_j)$ at $T_j = T_{biv}$. As such $P_{designh}$, as declared in Table 1, represents the heat load at $T_j = T_{designh}$ operation condition, where $pl(T_j) = 1.00$;

H_{HE} is the equivalent active mode hours for heating [hrs], as provided in Table 8

Q_{HE} is the seasonal electricity consumption for heating [kWh/a], calculated as:

$$Q_{HE} = (Q_H / SCOP_{on}) + H_{TO} \cdot P_{TO} + H_{CK} \cdot P_{CK} + H_{OFF} \cdot P_{OFF} + H_{SB} \cdot P_{SB} \quad \text{Equation 20}$$

where:

Q_H is as above;

H_{TO} , H_{CK} , H_{OFF} , H_{SB} are the number of seasonal operating hours (hrs/a) for heating in respectively thermostat-off, crankcase heater operation, off-mode and stand-by mode, given in Table 8;

P_{TO} , P_{CK} , P_{OFF} , P_{SB} is the electric power input [kW] in respectively thermostat-off, crankcase heater operation, off- and stand-by mode;

$SCOP_{on}$ is the average seasonal coefficient of performance, constructed from bin-specific coefficients of performance, and weighted by the seasonal hours the bin condition occurs, and including back up power consumption for bins where $P_{dh}(T_j) < Ph(T_j)$:

$$SCOP_{on} = \frac{\sum_{j=1}^n h_j * Ph(T_j)}{\sum_{j=1}^n h_j * \frac{Ph(T_j) - elbu(T_j)}{COP_{bin}(T_j)} + elbu(T_j)} \quad \text{Equation 21}$$

where:

T_j , j , n , and h_j are as defined before;

$Ph(T_j)$ is the heating load at bin j , calculated as:

$$Ph(T_j) = P_{designh} * pl(T_j) \quad \text{Equation 22}$$

where:

$$pl(T_j) = (T_j - 16) / (T_{designh} - 16) \quad \text{Equation 23}$$

$T_{designh}$ is the heating season reference design temperature in °C, from Table 5, which is determined by the designated heating season;

$elbu(T_j)$ is the capacity of a back up heater [kW] for bin j , needed to meet the heating part load if the declared capacity does not suffice, calculated as:

$$\text{if } P_{dh}(T_j) < Ph(T_j): elbu(T_j) = Ph(T_j) - P_{dh}(T_j) \quad \text{Equation 24}$$

$$\text{if } P_{dh}(T_j) \geq Ph(T_j): elbu(T_j) = 0 \quad \text{Equation 25}$$

$P_{dh}(T_j)$ is the declared heating capacity applicable to bin j , to be calculated using the declared values of $P_{dh}(T_j)$ at testing points $T_j = -15, -7, 2, 7, 12$ °C and/or T_{biv} , the availability of which depends on which heating season is designated (see table 6 for required declaration points per heating season). $P_{dh}(T_j)$ for other bins than specified shall be calculated through linear interpolation of declared capacities $P_{dh}(T_j)$ at the nearest outdoor temperatures.

Only in case of the average heating season and the colder heating season not being one of the designated seasons (i.e. COP(- 15) is not available) an exception to this rule can be made whereby the $COP_{bin}(T_j)$ values for outdoor temperatures - 8, - 9 and - 10 °C can be linearly extrapolated from the $COP_d(T_j)$ of the anchor points at - 7 °C and 7 °C for fixed capacity units. For variable capacity units, these values shall be extrapolated from $COP_d(- 7)$ and $COP_d(T_{biv})$. In case $T_{biv} = - 7$ °C, COP(- 8), COP(- 9), and COP(- 10) shall be assumed to equal to COP(- 7);

If the designated *heating season* is 'colder', and the lowest P_{dh} is at - 15 °C, the capacities for P_{dh} with $T_j < - 15$ °C shall be based on extrapolations from values at $T_j = - 15$ °C and - 7 °C.

$COP_{bin}(T_j)$ is the bin-specific coefficient of performance that applies to bin j , calculated according to the equations below for either fixed, staged or variable capacity, where:

3.2.1. For fixed capacity units

Calculate the anchor points $COP_{bin}(T_j)$ for the bin temperatures specified below to be used in inter- and extrapolations for $COP_{bin}(T_j)$ values at other bins.

Calculate for $T_j = 12, 7, 2, - 7, - 15$ °C ^{(6), (7)}, T_{biv} :

if $P_{dh}(T_j) \geq Ph(T_j)$ (in this condition the fixed capacity unit will cycle)

$$COP_{bin}(T_j) = COP_d(T_j) * [1 - C_{dh} * (1 - Ph(T_j)/P_{dh}(T_j))] \quad \text{Equation 26}$$

else if $P_{dh}(T_j) < Ph(T_j)$ (this corresponds to a situation where backup heating is required to meet the heating load):

$$COP_{bin}(T_j) = COP_d(T_j) \quad \text{Equation 27}$$

where:

$COP_d(T_j)$ is the *coefficient of performance* at the specified outdoor temperature T_j , as declared by the manufacturer in Table 1;

$P_{dh}(T_j)$ is the *heating capacity* at the specified outdoor temperature T_j , as declared by the manufacturer in Table 1;

$Ph(T_j)$ is the *part load* in kW at the specified outdoor temperature T_j , as defined in equation 5.

C_{dh} is the degradation factor for heating, either taken as default value 0,25 or equal to C_{dc} (for cooling) or determined by tests and calculated for $T_j = 12$ °C as:

$$C_{dc} = (1 - COP_{cyc}/COP_d(T_j))/(1 - P_{ych}/P_{dh}(T_j)) \quad \text{Equation 28}$$

where:

COP_{cyc} is the average coefficient of performance over the cycling test interval (active + off mode) calculated as the integrated heating capacity over the interval [kWh] divided by the integrated electric power input over that same interval [kWh];

P_{ych} is the (time-weighted) average heating capacity output [kW] over the cycling test interval (active + off mode);

Values for $COP_{bin}(T_j)$ at other bins shall be calculated as follows:

- for bins j with outdoor temperatures T_j between 12, 7, 2, - 7, - 15 °C (see footnote 6, 7) and T_{biv} , $COP_{bin}(T_j)$ is calculated from linear inter- and extrapolation from the nearest two known anchor points;
- Only in case of the average heating season and the colder heating season not being one of the designated seasons (i.e. COP(- 15) is not available) an exception to this rule can be made whereby the $COP_{bin}(T_j)$ values for outdoor temperatures - 8, - 9 and - 10 °C can be linearly extrapolated from the COP of the anchor points at - 7 °C and 7 °C;

⁽⁶⁾ $T_j = - 7$ °C is not required for heating season 'Warmer';

⁽⁷⁾ $T_j = - 15$ °C is not required for heating season 'Warmer' and 'Average';

- for bins j with an outdoor temperature T_j higher than 12 °C, $COP_{bin}(T_j)$ is calculated through linear extrapolation with the outdoor temperature starting from anchor points $COP_{bin}(T_j)$ with $T_j = 7$ and $T_j = 12$;
- for bins j with an outdoor temperature T_j lower than T_{ol} , $COP_{bin}(T_j)$ is equal to '1' in order to avoid a division by zero, but effectively the value is irrelevant because $[Ph(T_j) - elbu(T_j)]$ in the equation for $SCOP_{on}$ (eq. 20) is equal to zero.

3.2.2. For staged capacity units

Calculate the anchor points $COP_{bin}(T_j)$ for the bin temperatures specified below to be used in inter- and extrapolations for $COP_{bin}(T_j)$ values at other bins.

The manufacturer shall declare for each required test condition (with outdoor temperatures $T_j = 12, 7, 2, -7, -15$ °C (see footnote 6, 7) and T_{biv} , depending on the designated heating season) the heating capacity ($P_{dh}(T_j)$) and coefficient of performance ($COP_d(T_j)$) of the equipment at both possible settings, to be indicated with " $_{-hi}$ " for the setting resulting in the highest capacity and " $_{-lo}$ " for the setting that results in the lower capacity. The anchor points $COP_{bin}(T_j)$ are calculated from $P_{dh_{hi}}$, $P_{dh_{lo}}$ and/or $COP_{d_{hi}}$, $COP_{d_{lo}}$ values for capacity and efficiency as follows:

Calculate for $T_j = 12, 7, 2, -7, -15$ °C (see footnote 6, 7), T_{biv} :

if $P_{designh} * pl(T_j) * (1 - tolerance) \leq P_{dh_{lo}} \leq P_{designh} * pl(T_j) * (1 + tolerance)$, then

$$COP_{bin}(T_j) = COP_{d_{lo}} \quad \text{Equation 29}$$

where *tolerance* is as defined before.

if $P_{designh} * pl(T_j) * (1 - tolerance) \leq P_{dh_{hi}} \leq P_{designh} * pl(T_j) * (1 + tolerance)$, then

$$COP_{bin}(T_j) = COP_{d_{hi}} \quad \text{Equation 30}$$

where *tolerance* is as defined before.

else if $Ph(T_j) > P_{dh}(T_j)_{lo}$ and $Ph(T_j) < P_{dh}(T_j)_{hi}$ then

$$COP_{bin}(T_j) = \frac{Ph(T_j)}{\frac{P_{dh}(T_j)_{hi} * (Ph(T_j) - P_{dh}(T_j)_{lo})}{(P_{dh}(T_j)_{hi} - P_{dh}(T_j)_{lo}) * COP_{d}(T_j)_{hi}} + \frac{P_{dh}(T_j)_{lo} * (Ph(T_j)_{hi} - Ph(T_j))}{(P_{dh}(T_j)_{hi} - P_{dh}(T_j)_{lo}) * COP_{d}(T_j)_{lo}}} \quad \text{Equation 31}$$

else:

$$COP_{bin}(T_j) = COP(T_j)_{lo} \cdot [1 - Cdh_{lo} \cdot (1 - Ph(T_j) / P_{dh}(T_j)_{lo})] \quad \text{Equation 32}$$

where:

$COP_d(T_j)_{hi}$ and $COP_d(T_j)_{lo}$ are declared coefficient of performance values in Table 1;

$P_{dh}(T_j)_{hi}$ and $P_{dh}(T_j)_{lo}$ are declared values in Table 1;

$Ph(T_j)$ is the heat load for bin j with T_j is 7, 2, -7, -15 °C (see footnote 6, 7);

Cdh_{lo} is the *degradation factor for heating*, which is either the default value 0,25, or equal to Cdc (for cooling) or determined by tests and calculated for $T_j = 12$ °C as:

$$Cdc = (1 - COP_{cyc} / COP_d(T_j)_{lo}) / (1 - P_{cyc} / P_{dh}(T_j)_{lo}) \quad \text{Equation 33}$$

where:

COP_{cyc} and P_{cyc} are as defined before;

$COP_{bin}(T_j)$ values for bins j with outdoor temperatures T_j other than $T_j = 7, 2, -7, -15$ °C (see footnote 6, 7) are calculated according to the same rules as those applying to **fixed capacity** units.

3.2.3. For variable capacity units

Calculate the anchor points $COP_{bin}(T_j)$ for the bin temperatures specified below to be used in inter- and extrapolations for $COP_{bin}(T_j)$ values at other bins.

If the capacity control of the unit allows it to operate with a declared capacity $P_{dh}(T_j)$ corresponding to the required part load $P_{designh}(pl(T_j) \pm \text{tolerance})$ the $COP_{bin}(T_j)$ for bin j shall be assumed to be equal to $COP_d(T_j)$;

Calculate for $T_j = 12, 7, 2, -7, -15^\circ\text{C}$ (see footnote 6, 7):

if $P_{designh}(pl(T_j))(1 - \text{tolerance}) \leq P_{dc}(T_j) \leq P_{designh}(pl(T_j))(1 + \text{tolerance})$, then:

$$COP_{bin}(T_j) = COP_d(T_j) \quad \text{Equation 34}$$

where:

tolerance , $P_{dh}(T_j)$, $P_{designh}$, $pl(T_j)$, $COP_{bin}(T_j)$ and $COP_d(T_j)$ are as defined before;

else: follow the calculation procedure for **staged capacity** units.

3.3. Determination of P_{TO} , P_{SB} , P_{OFF} and P_{CK}

3.3.1. Determination of P_{TO}

The power consumption during thermostat off mode is obtained during the cyclic tests required to determine the C_d and C_c values.

If no cyclic test is performed, after the test at 20°C in cooling mode (for cooling only or reversible units), the thermostat set point is increased until the compressor stops. The standby power consumption is deducted from the measured total power consumption of the unit to determine the thermostat off power consumption on a time period not inferior to one hour.

3.3.2. Determination of P_{SB}

At the condition of 35°C ambient temperature in cooling mode, the unit is stopped with the control of the device. After 10 minutes, the residual power consumption is measured and assumed to be the standby mode power consumption.

For heating only units, the measurements are done in the same way, but at the condition of 12°C ambient temperature.

3.3.3. Determination of P_{OFF}

Following the standby mode power test, the unit should be switched in off mode while remaining plugged. After 10 minutes, the residual power consumption is measured and assumed to be the off mode power consumption.

In case no off mode switch is available on the unit (e.g. on the indoor unit(s) for split units), the off mode power consumption is supposed equal to the standby mode power consumption.

3.3.4. Determination of P_{CK}

The test is performed in heating mode, at 2°C ambient temperature. The unit is stopped with the control of the device after at least 20 minutes of heating operation, and the energy consumption of the unit shall be measured for 8 hours. If unit does not have function for heating, it shall be operated with cooling mode. Average of 8 hour power input shall be calculated.

The standby power consumption is deducted from this measured power consumption to determine the crankcase heater operation power consumption.

4. Single ducts and double ducts

4.1. EER

The energy efficiency ratio $EERd(T_j)$ for single ducts and double ducts is declared for T_{in} and T_j at standard rating conditions and calculated as:

$$EERd(T_j) = P_{dc}(T_j) / P_{EER} \quad \text{Equation 35}$$

Where:

$P_{dc}(T_j)$ is the declared capacity for cooling in kW, at standard rating conditions as required in Table 4;

P_{EER} is the total electric power input to the appliance in kW, at standard rating conditions as required in Table 4.

4.2. COP

The coefficient of performance $COPd$ for single ducts and double ducts shall be declared for T_{in} and T_j at standard rating conditions and calculated as:

$$COPd(T_j) = P_{dh}(T_j) / P_{COP} \quad \text{Equation 36}$$

where:

$P_{dh}(T_j)$ is the declared capacity for heating in kW (of the vapour compression cycle only), at standard rating conditions as described in Table 4;

P_{COP} is the total electric power input to the appliance in kW, at standard rating conditions as described in Table 4.

4.3. Seasonal electricity consumption

The electricity consumption Q_{DD} in kWh/60 min. of double ducts is calculated for cooling or heating as:

$$\text{for cooling } Q_{DD} = H_{CE} \cdot P_{EER} + H_{TO} \cdot P_{TO} + H_{SB} \cdot P_{SB} + H_{OFF} \cdot P_{OFF} + H_{CK} \cdot P_{CK} \quad \text{Equation 37}$$

$$\text{for heating } Q_{DD} = H_{HE} \cdot P_{COP} + H_{TO} \cdot P_{TO} + H_{SB} \cdot P_{SB} + H_{OFF} \cdot P_{OFF} + H_{CK} \cdot P_{CK} \quad \text{Equation 38}$$

where:

H_{CE} , H_{HE} , H_{TO} , H_{SB} , H_{OFF} , H_{CK} are the number of operating hours (h) for cooling respectively heating in respectively *active mode*, *thermostat-off mode*, *stand-by mode*, *off-mode* and *crankcase heater operation mode*, as described in Table 8;

P_{EER} , P_{COP} , P_{TO} , P_{SB} , P_{OFF} , P_{CK} are the average electric power consumption values for respectively *rated power input for cooling* (P_{EER}) or *heating* (P_{COP}) in *thermostat-off mode*, *stand-by mode*, *off-mode* and *crankcase heater operation mode*, as declared by the manufacturer.

The electricity consumption of single ducts Q_{SD} in kWh/60 min will be expressed for the *active mode* only, using as *equivalent active mode hours* (H_{CE} , H_{HE}) a value of 1:


$$\text{for cooling } Q_{SD} = H_{CE} \cdot P_{EER} \quad \text{Equation 39}$$

$$\text{for heating } Q_{SD} = H_{HE} \cdot P_{COP} \quad \text{Equation 40}$$

where:

P_{EER} and P_{COP} are as defined above.

Annex A: The graph below shows (for heating) the relationship of the *bivalent point* T_{biv} and the *part load*, including the *design load for heating* at $T_{designh}$ (where part load equals 1). The area where *part load* exceeds the declared capacity is considered to be met by electric back up heating.

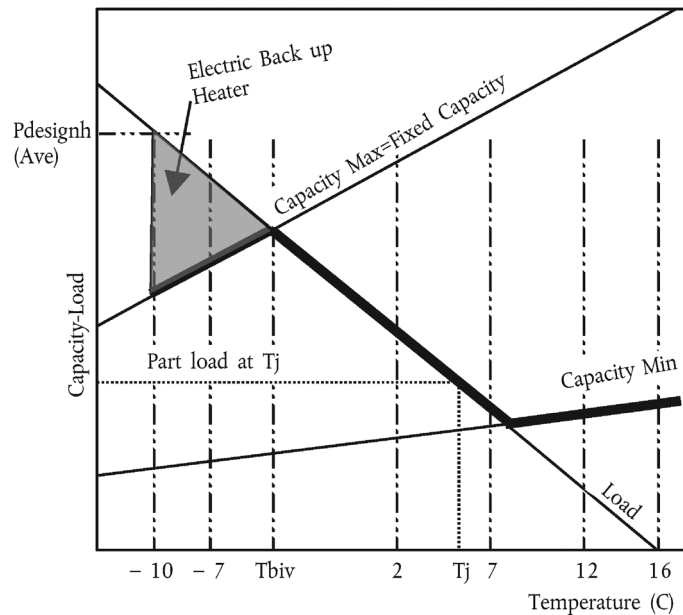

SECTION 2 - COMFORT FANS

1. Definitions

- (1) 'Comfort fan' means an appliance primarily designed for creating air movement around or on part of a human body for personal cooling comfort, including comfort fans that can perform additional functionalities such as lighting;
- (2) 'Fan power input' (P_F) means the electric power input of a 'comfort fan' in Watt operating at the declared *maximum fan flow rate*, measured with the *oscillation mechanism* active (if /when applicable).
- (3) 'Service value' (SV) $[(m^3/min)/W]$ means for comfort fans the ratio of the *maximum fan flow rate* $[m^3/min]$ and the *fan power input* $[W]$;
- (4) 'Maximum fan flow rate' (F) means the air flow rate of the comfort fan at its maximum setting $[m^3/min]$, measured at the fan outlet with the *oscillating mechanism* (if applicable) turned off;
- (5) 'Oscillating mechanism' means the capability of the comfort fan to automatically vary the direction of the air flow while the fan is operating;
- (6) 'Fan electricity consumption' (Q) $[kWh/a]$ means the annual electricity consumption of the comfort fan;
- (7) 'Fan sound power level' means the A-weighted sound power level of the comfort fan while providing the *maximum fan flow rate*, measured at the outlet side;
- (8) 'Fan active mode hours' (H_{CE}) means the number of hours $[hrs/a]$ the comfort fan is assumed to provide the *maximum fan flow rate*, as described in part 2, table 10.

2. Tables

Table 9

Information sheet for comfort fans

Information to identify the model(s) to which the information relates to [fill in as necessary]

Description	Symbol	Value	Unit
Maximum fan flow rate	F	$[x,x]$	m^3/min
Fan power input	P	$[x,x]$	W
Service value	SV	$[x,x]$	$(\text{m}^3/\text{min})/\text{W}$
Standby power consumption	P_{SB}	$[x,x]$	W
Sound power level	L_{WA}	$[x]$	dB(A)
Measurement standard for service value	[state here the reference to measurement standard used]		
Contact details for obtaining more information	At least, name, position, postal address, e-mail address and telephone number.		

Table 10

Operational hours of comfort fans

	Unit	Active mode	Standby mode	Off mode
		H_{CE}	H_{SB}	H_{OFF}
Comfort fan	hrs/a	320	1 120	0

3. Service value and annual electricity consumption

3.1. Service value

The service value SV [$\text{m}^3/\text{min}/\text{W}$] for comfort fans is calculated as:

$$SV = F / P_F \quad \text{Equation 41}$$

where:

F is the maximum fan flow rate [m^3/min];

P_F is the fan power input [W].

3.2. Seasonal electricity consumption

The seasonal electricity consumption Q [kWh/a] of comfort fans is calculated as:

$$Q = H_{CE} \cdot P_F + H_{SB} \cdot P_{SB} \quad \text{Equation 42}$$

where:

H_{CE} , H_{SB} are the number of operating hours in respectively active mode and stand-by mode, taken from Table 10 [hrs/a];

P_F is the nominal fan power input [kW];

P_{SB} is the power consumption in stand-by mode [kW].

For power consumption in stand-by mode (P_{SB}), the same testing method applies as for air-conditioning appliances.

The electric fan power input is measured with the oscillating mechanism on. The flow rate is measured without the oscillations.

SECTION 3 - GENERAL ASPECTS

TEST REPORT

For the purpose of conformity assessment the manufacturer shall prepare and keep available upon request from market surveillance authorities test reports and all documentation needed to support the information declared by the manufacturer.

The test reports shall contain all relevant measurement information including but not limited to:

- relevant charts and sampled value tables of temperatures, relative humidity values, part loads, flow rates, electric voltage/ frequency/ harmonic distortion during the test period(s) and for all relevant test points;
- description of the test method(s) as applicable, laboratory space and ambient conditions, physical test rig set up specifying position of data capturing devices (e.g. sensors) and data processing equipment, as well as the operating range and measurement accuracy;
- settings of the unit being tested, description of the function of automatic switching of settings (e.g. between off mode and standby mode);
- description of the test sequence followed, e.g. to arrive at equilibrium conditions as applicable.

For variable capacity units, where EER, COP and capacities are declared, these shall be given **for the same frequency settings** for the same part load conditions.

The test report shall include the results of the part load test(s) and the calculation of EER or COP, reference SEER/SCOP and reference SEER_{on}/SCOP_{on}, where applicable.

In the test report, the calculated EER/COP values and reference SEER/SEER_{on}/SCOP/ SCOP_{on} values shall be based on the values declared by the manufacturer, on the condition that those values are within the acceptable tolerances.

Where the document does not describe measurement conditions, calculations or other aspects, manufacturers shall refer to measurements and calculations made using a reliable, accurate and reproducible method, which takes into account the generally recognised state of the art methods, and whose results are deemed to be of low uncertainty, including methods set out in documents the reference numbers of which have been published for that purpose in the Official Journal of the European Union.
